


Installing the Aux-3 Harness

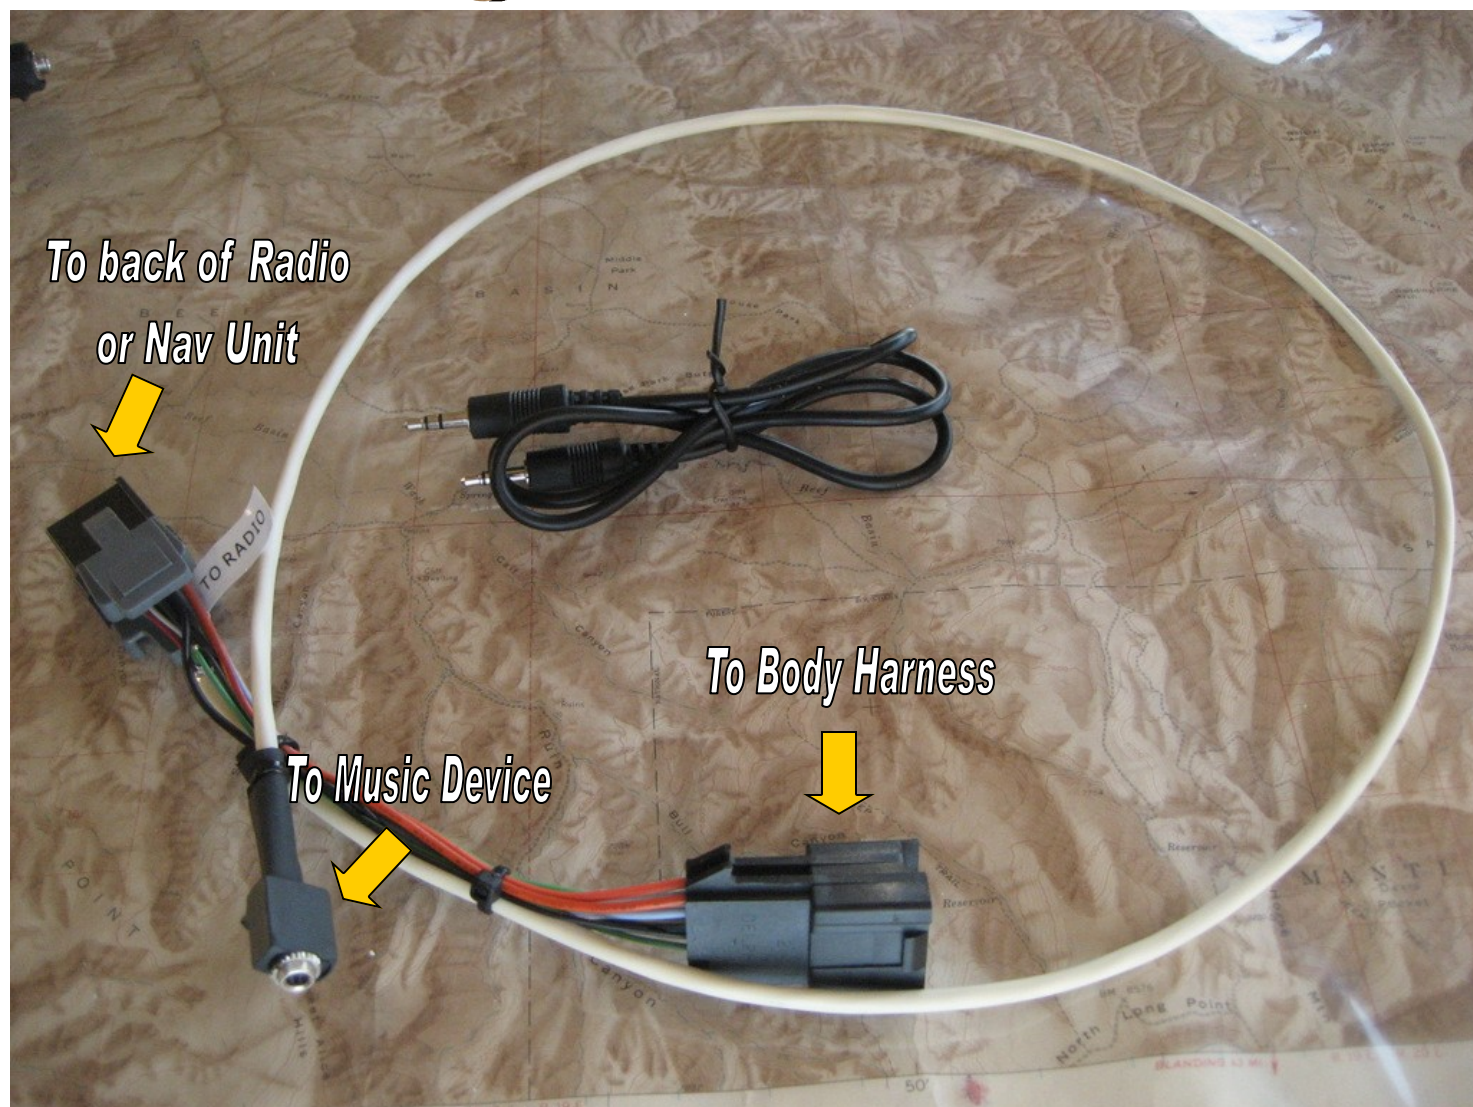

See the website at <http://www.kawal.net/auxinput.htm> for more photos and details.

1. Remove your center console per the instructions, then the six 7mm screws holding in the heater control module and the radio/Nav unit. On the back of the radio, you will find a 12 pin and a 24 pin connector. Unplug the 12 pin connector. Plug that connector on the body harness into the Aux-3 harness. Push the connector STRAIGHT into the female mating connector. It should feel right—don't force it—you can bend a pin if you don't push it straight in.
2. Plug the other 12 pin connector into the back of the radio. Again, do not force the connector.
3. Ideally, you should mount the 3.5mm (1/8") jack to a panel. The right side center console panel is suggested, but you'll need a 1/4" hole drilled somewhere to mount the jack.
4. Use the stereo patch cord to connect your music device.
5. Press the XM1/2 button on your radio. You should now hear your audio from your music device instead of XM. When you unplug your patch cord, XM audio will again be heard.

If you have any problems or questions, please email Ray Kawal at ray@kawal.net. My phone