



Hints for Installing the new F55 Switch Adapter Harness

To install the adapter harness on the switch, you must first cut off part of the plastic housing. Cut off the housing as close to the ends of the pins as possible.

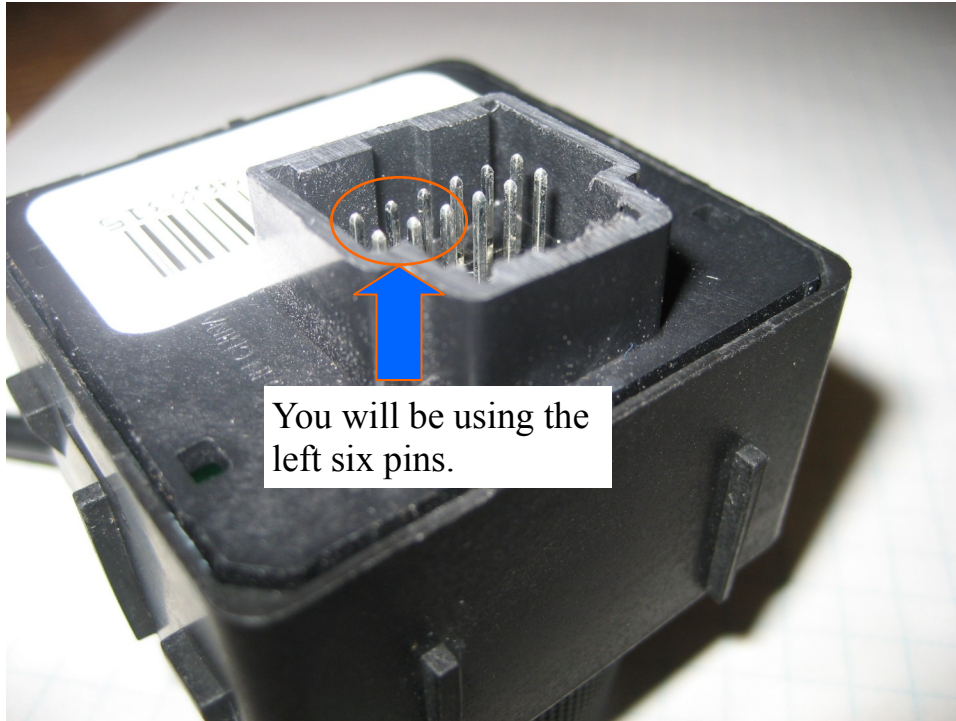

If you don't cut enough of the housing off, the remaining housing will interfere with the adapter harness as shown by the red arrow below. Trim it as necessary to allow the harness connector to fit snugly onto the contact pins.

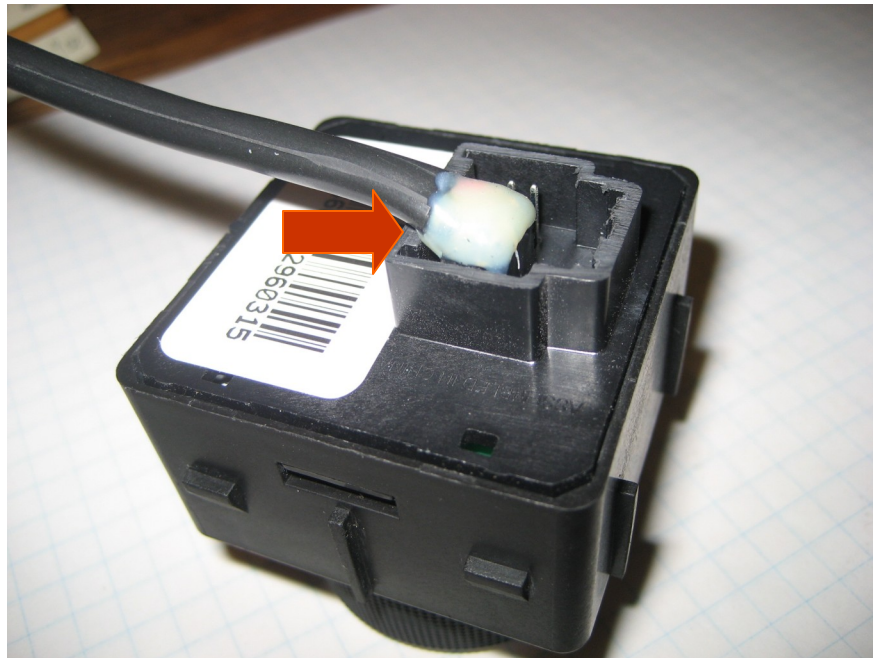

If you have any questions, please feel free to email or call me anytime. Good luck on your project.

Ray Kawal, phone (360) 683-3027, email ray@kawal.net