




# Hints for Installing the Nav-1 Switch Adapter Harness

Your adapter harness may have another color wire instead of the green/white wire shown below:

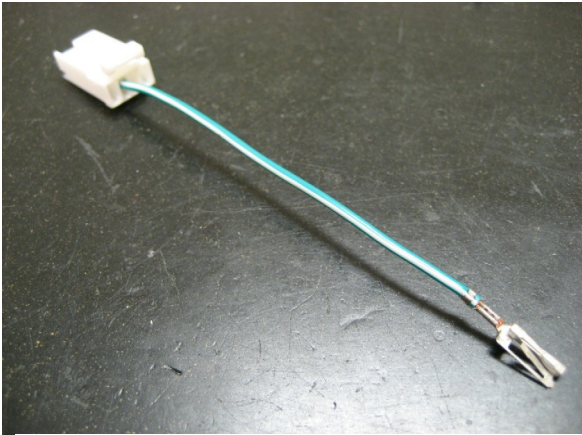

Look closely at the photos on my website at: <http://www.kawal.net/navigation.htm> to see how the female terminal must be removed from the 12 pin connector you pulled from the back of the Navigation unit. To remove the terminal, you must first remove the gray TPA (terminal position assurance). The TPA prevents any of the terminals from being removed. It is shown behind the blue arrow in the photo below left.

Note there are two green/white wires in the 12 pin connector. Do not pull the wrong one. You must pull the green/white wire shown at the blue arrow below. :

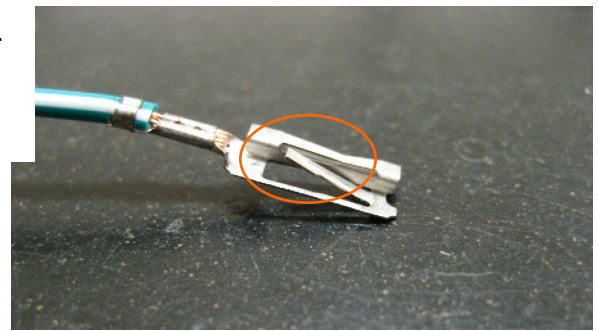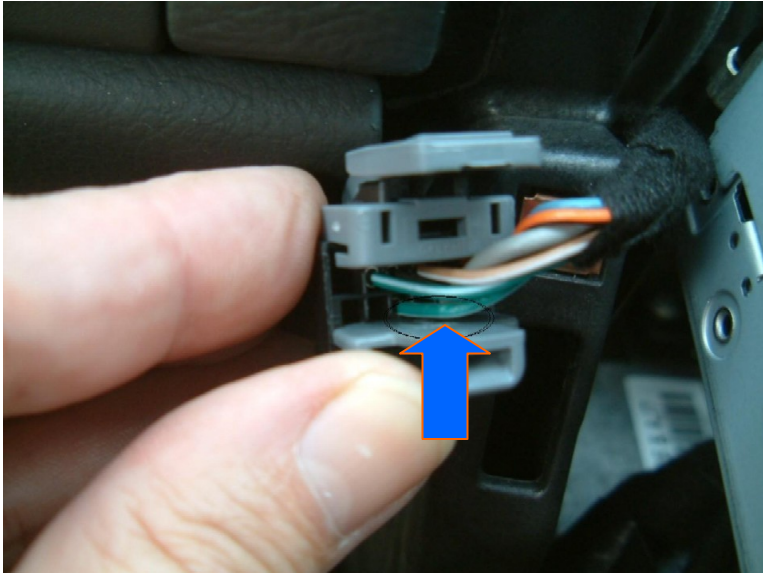

See the locking tab in the orange oval above? Use a small jewelers screwdriver to push the tab down as you gently pull on the original green/white wire in the 12 pin connector. Once you remove it, if the tab is distorted, use the screwdriver to bend it back in place so it will again lock into the new 2 pin connector.

Insert the new terminal from the 2 pin connector (shown at the red arrow) back into the **original position** in the 12 pin connector:



If you have any questions, please feel free to email or call me anytime. Good luck on your project.

Ray Kawal, phone (360) 683-3027, email [ray@kawal.net](mailto:ray@kawal.net)

