Installing the Fuse Jumper

1. Open and Expose the Passenger Footwell Fuse Panel.



4. Remove the red 10 amp Windshield Wiper Fuse and the yellow 20 amp Power Outlet Fuse with the fuse puller.


2. Using a small screwdriver, pry up and rotate the latch on the blue wire connector.



3. Remove the blue wire connector, then remove the black fuse box cover by pushing the latches away.



6. Inspect the Fuse Jumper. The left terminal, shown by the red arrow, MUST go to the WSW HOT socket.

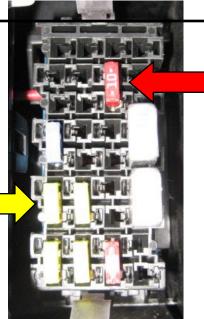

HOT in Run and Acc Mode

To Windshield Wipers

НОТ

To Power Outlet

To Windshield Wipers

7. Install the Fuse Jumper

1 時間

5. Look carefully at the four fuse sockets. We will NOT use the "Always Hot" Power Outlet fuse socket.

